


Rock' Bar-B-Que

Grill Dome Blower Installation Instructions

Step 1

Remove the existing sliding draft door from the Grill dome. Slide the Stoker blower into the place where the door was removed. Make sure that the cable comes out on top.

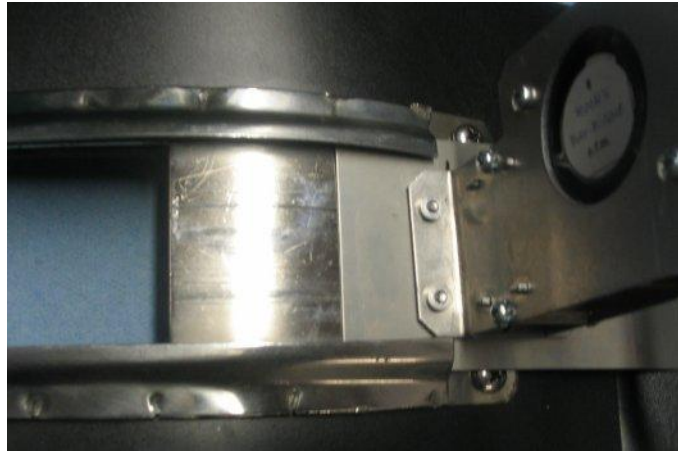

Step 2

Slide the Blower in until the left edge of the the adapter is even with the left edge of the retaining slots as shown.



For more information, please see the instructional videos posted on our website at www.rocksbarbque.com