

Rock' Bar-B-Que

Primo Installation Instructions


Step 1

Open the existing sliding draft door on the Primo. Drop the Blower into the lower door track. Slide the Blower left until it is seated under the door retainer. Make sure that the cable comes out on top.



Step 2

Center the adapter over the hole. Slide the Blower door closed until the left edge of door overlaps the left edge of the Blower adapter and up flush with the Blower housing as shown.

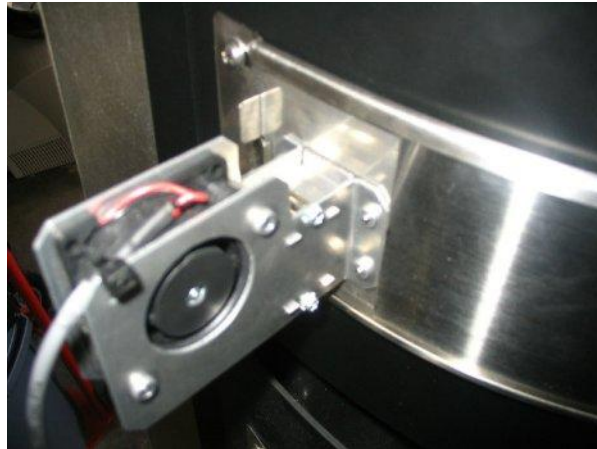

For more information, please see the instructional videos posted on our website at www.rocksbarbque.com